

## **IMPORTANT**

Remove jumper between terminal I & C before connecting interlocks. Wire in accordance with local & Canadian Electrical codes. Read instructions carefully before wiring and operating.

Frame shown in heavy line represents Thermolec Electric Coil. All wiring outside this frame are "typical external wiring by others".

## **LEGEND**

Automatic Reset Cut Out Operating Contactors C1,C2 Back-up Contactor to Manual СМ

DISC Disconnect Switch

D46 Electronic Step Controller Fuse

Manual Reset Cut Out М

OL Overload Relay

PDS Pressure Differential Switch PES Pressure Electric Switch

PLPilot Light R

Relay

Solid State Relay SSR

Control Circuit Transformer

TH Thermostat Thermal Relay THR DT Duct Thermostat RT Room Thermostat

TITLE/TITRE



LTEE LTD

DRAWING NO. 3B57-7M2U-6300-0000 DATE **PER**